LEFT SIDE

CHAIR HEIGHT ADJUSTMENT To adjust sitting height, gently lift the lever until desired position. As the function is operated by gas struts, please leave the seat to lift the height, but/or remain in the seat to lower the height.

FOOTREST HEIGHT ADJUSTMENT Lift the lever gently and press footrest down to extend space for legs or let the gas strut lift to desired position.

CHAIR ROTATION Push lever forward to enable rotation of the seat. The seat may remain in open position, but it is recommended to lock the seat in desired position by firmly pulling the lever backwards until the chair is fixed.

FOOT PLATE ADJUSTMENT The footrest folds back easily if space is needed either for rotation of the seat or simply to change working position

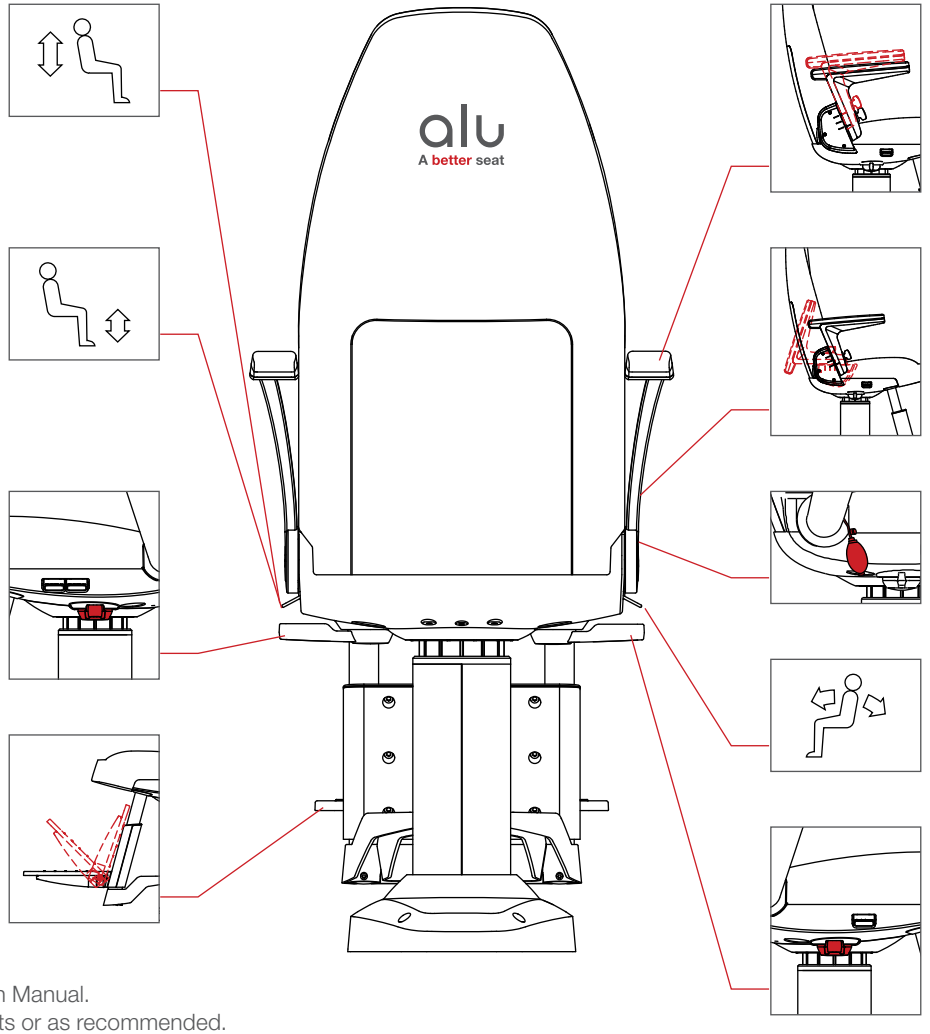

RIGHT SIDE

ARMREST HEIGHT ADJUSTMENT (APPLIES ONLY TO ALUTECH 500) To adjust the height of the armrest loosen the adjustment wheel. Hold firmly under the armrest base and lift up or press down to desired position. There is an indicator on the base to assure correct height on both sides.

ARMREST ROTATION (APPLIES TO BOTH ALUTECH 400 / 500) Flip armrest backwards at convenience if easier access or more space is required.

LUMBAR SUPPORT Use the pump mechanism to adjust the lumbar support. The pump can be easily reached when user is seated.

BACKREST ADJUSTMENT Lift the lever gently to recline the seat back to desired position. The max reclining is limited depending on the type of Alutech 500 delivered.

DECKRAIL ADJUSTMENT Push the lever firmly forward to release the break from the deck rail. Please assure to push the lever back to lock the seat onto desired position. The chair should always be locked on the rail to avoid personal damage.

For more detailed information please refer to Installation Manual.
Please maintain the seat upholstery with mild detergents or as recommended.

© Alu Design & Services AS | Skibåsen 20b, Norway, 4636 Kristiansand | www.alu-design.no
T: +47 46 82 60 00 | F: +47 38 02 33 03 | info@alu-design.no

alu
A better seat